

AM-32 to AL-32 Interconnection details


To connect a AM-32 to a AL-32 it requires a single Serial Data connection cable between the Port 2 connector on the AM-32 and the DATA-IN connector on the AL-32.

The cable/connector type and pin connection details for this are as follows:

Cable: Industry standard 'RS 422' type. (Two twisted pairs with screen/drain wire).

Connectors: 9 way male 'D' connector at each end.

Pin connections: As shown below.

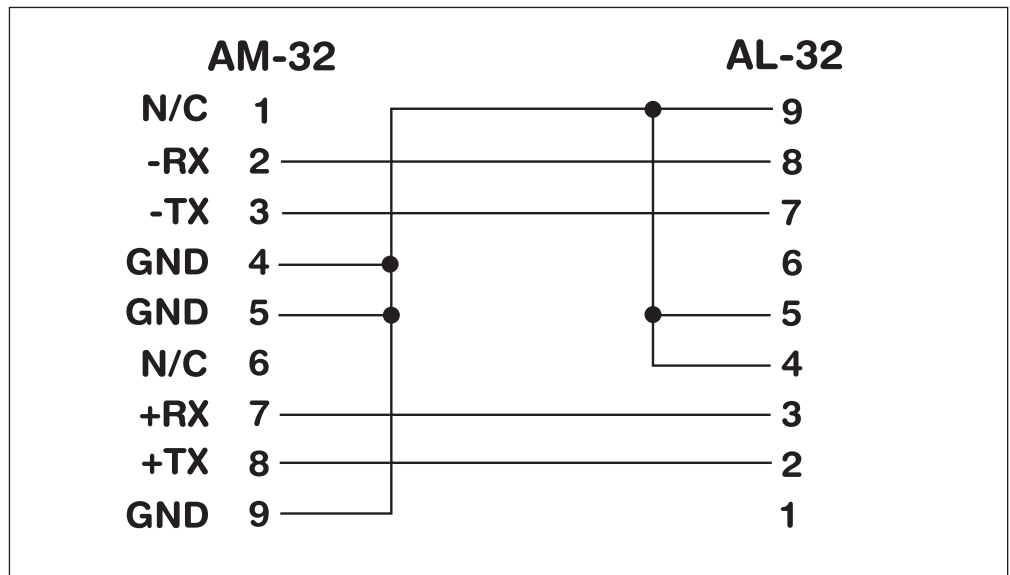

Please note that for correct operation of the AL-32 the software installed in the AM-32 needs to be Revision 1.5 or above.

